
## nGSM - manual

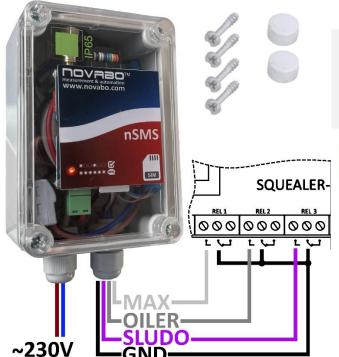

- 3 inputs

- 3 phone numbers

- power supply 230V

GSM module reports to three selected phone numbers. Works with Squealer series controllers.

Read the instructions before using it. It is forbidden to interfere with the construction or carry out independent repairs. Maintenance or renovation activities should be carried out by authorized personnel (installer or company service). The manufacturer does not accept any liability for damages resulting from incorrect assembly, malfunction (device, software) or damage to the device.

LAUNCH #1. Remove the PIN from the SIM card. #2. Insert the SIM card into the device and connect the power supply. #3. The LED will start flashing quickly, and when logged into the GSM network, it will start flashing slowly(1 time in 2 seconds). #4. Shorting of a wire in purple, gray, white to ground (black) starts sending an SMS.

PROGRAMMING To program the phone numbers that will receive SMS messages, send a command as shown in the example below.

@#0048111111111#00482222222#0048333333333	for three numbers
@#0048111111111#004822222222	for two numbers
@#004811111111	for one number

## DEFAULT SMS TEXTS SENT FORM THE DEVICE

MAX alarm Maximum level exceeded
OILER alarm Oil/fat level exceeded
SLUDO alarm Sludge level exceeded

Max, Oiler, Sludo = OK Maximum level, oil, sludge in the norm

## TECHNICAL DATA

Power 230V, 0.43A
Inputs: NO (normally open)
Ambient temperature -30°C ÷ +60°C
Housing IP 65, 75x110x59 mm (without glands)
Glands 2x M12, cable dimensions Ø 4.0-6.0 mm
Mounting method Vertically
CE Compatibility Yes

Phone: +48/58-746-37-73

www.novabo.com , novabo@novabo.com

